Miele

Operating and installation instructions

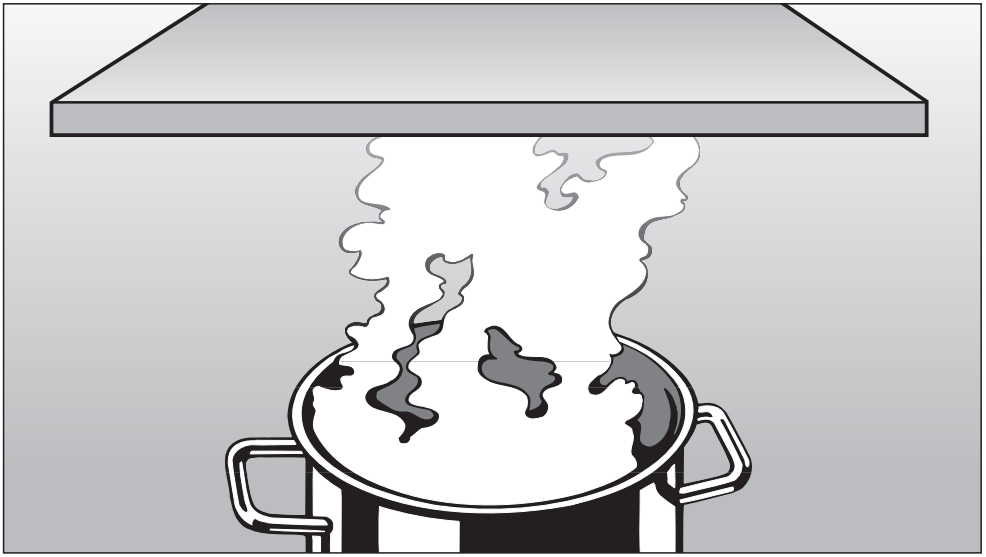

Cooker hood
DA 5000 D

To avoid the risk of accidents or damage to this appliance it is **essential** to read these instructions before it is installed and used for the first time.

en - GB, IRL, ZA

M.-Nr. 07 087 760

Contents

Caring for the environment . . . 3
Warning and Safety instructions . . . 4
Guide to the appliance . . . 10
Mode of operation . . . 12
Operation . . . 13
To switch the fan on ⏻ . . . 13
To select a power level . . . 13
Run-on option "5 15" . . . 14
To switch the fan off ⏻ . . . 14
Hob lighting . . . 14
Feature lighting . . . 15
Safety cut-out . . . 15
Operating hours counter . . . 15
Sensor control audible tones . . . 16
Cleaning and care . . . 17
Housing . . . 17
Grease filters . . . 18
Resetting the grease filter operating hours counter . . . 19
Changing a halogen lamp . . . 20
Changing a fluorescent tube . . . 21
Appliance dimensions . . . 22
Safety distance between hob and cooker hood . . . 22
Installation . . . 23
Installation instructions . . . 23
Assembly parts . . . 23
Connection for air extraction . . . 24
Electrical connection . . . 26
Operation with Control module DSM 400 . . . 27
Connection to a window contact switch . . . 27
Potential free connection . . . 27
Connection to a light switch . . . 28
After Sales Service . . . 29
Technical data . . . 30

Disposal of the packing material

The transport and protective packing has been selected from materials which are environmentally friendly for disposal, and can normally be recycled.

Packaging e.g. cling film, polystyrene and plastic wrappings must be kept out of the reach of babies and young children. Danger of suffocation!

Dispose of or recycle all packaging materials safely as soon as possible.

Disposal of your old appliance

Electrical and electronic appliances often contain materials which, if handled or disposed of incorrectly, could be potentially hazardous to human health and to the environment. They are, however, essential for the correct functioning of your appliance. Please do not therefore dispose of it with your household waste.

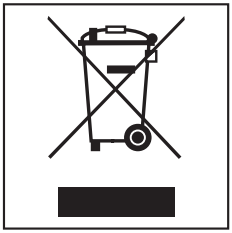

Please dispose of it at your local community waste collection / recycling centre or contact your dealer for advice. Ensure that it presents no danger to children while being stored for disposal.

It should be unplugged or disconnected from the mains electricity supply by a competent person.

This appliance complies with all relevant local and national safety requirements. Inappropriate use can, however, lead to personal injury and damage to property.

To avoid the risk of accidents and damage to the appliance, please read these instructions carefully before using it for the first time. They contain important information on the safety, installation, use and maintenance of the appliance.

Keep these instructions in a safe place and ensure that all users are familiar with the contents. Pass them on to any future owner of the appliance.

Correct application

▶ This appliance is intended for domestic use only.
Any other usage is at the owner's risk and could be dangerous. The manufacturer cannot be held liable for damage resulting from incorrect or improper use or operation.

▶ This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience or knowledge, unless they are supervised whilst using it or have been given instruction concerning its use by a person responsible for their safety.

Safety with children

▶ This appliance is only intended for use by adults who have read these instructions.

▶ This appliance is not a toy! To avoid the risk of injury, keep children well away and do not allow them to play with it or to use the controls. They will not understand the potential dangers posed by it. They should be supervised whenever you are working in the kitchen.

▶ Older children may use the cooker hood only when its operation has been clearly explained to them and they are able to use it safely, recognising the dangers of misuse.

▶ Please be aware that on cooker hoods with halogen lighting, the lamps will get very hot during use and remain hot for some time after switching off. To safeguard against burning, keep children well away from the lamps at all times.

Technical safety

▶ Before installation, check the cooker hood for visible signs of damage. Under no circumstances should you use a damaged appliance. A damaged appliance is dangerous.

▶ Before connecting the appliance to the mains supply, make sure that the voltage and frequency details given on the data plate correspond with the on-site electricity supply (see "After Sales Service"). If they do not correspond the appliance could suffer damage. Consult a qualified electrician if in any doubt.

▶ The electrical safety of this appliance can only be guaranteed when continuity is complete between the appliance and an effective earthing system which complies with current local and national safety regulations. It is most important that this basic safety requirement is present and tested regularly, and where there is any doubt, the household wiring system should be inspected by a qualified electrician. The manufacturer cannot be held liable for the consequences of an inadequate earthing system (e.g. electric shock).

▶ For safety reasons, this appliance may only be used when it has been fully installed.

▶ Only open the housing as described in the instructions given in the installation sheet and in the Cleaning and care section of this booklet. Under no circumstances should any other parts of the housing be opened. Tampering with electrical connections or components and mechanical parts is highly dangerous to the user, and can cause operational faults.

▶ Installation, maintenance and repairs may only be carried out by a Miele authorised person in accordance with current national and local safety regulations.
Repairs and other work by unqualified persons could be dangerous. The manufacturer cannot be held liable for unauthorised work.

▶ Faulty components must only be replaced by genuine Miele original parts. The manufacturer can only guarantee the safety of the appliance when Miele replacement parts are used.

▶ During installation, maintenance and repair work, the appliance must be disconnected from the mains electricity supply. It is only completely isolated from the electricity supply when:

– it is switched off at the isolator, or
– the screw-out fuse is removed (in countries where this is applicable), or
– the mains fuse is disconnected, or
– it is switched off at the wall socket and the plug withdrawn, or
– the fuse from the fused spur connection unit is withdrawn.

▶ Do not connect the appliance to the mains electricity supply by a multi-socket unit or an extension lead. These do not guarantee the required safety of the appliance (e.g. danger of overheating).

▶ This appliance may only be used in mobile installations such as ships, caravans, aircraft etc. if a risk assessment of the installation has been carried out by a suitably qualified engineer.

▶ In areas which may be subject to infestation by cockroaches or other vermin, pay particular attention to keeping the appliance and its surroundings in a clean condition at all times. Any damage which may be caused by cockroaches or other vermin will not be covered by the guarantee.

Using at the same time as other heating appliances that depend on the air from the room

Warning - danger of toxic fumes

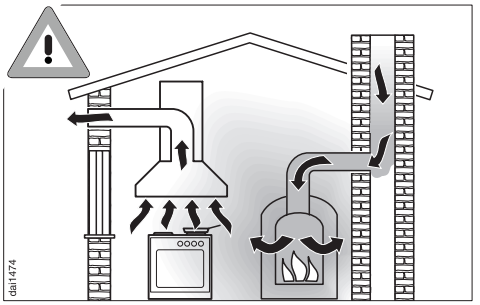

▶ Great care should be taken when using the cooker hood at the same time and in the same room or area of the house as another heating appliance which depends on the air in the room. Such appliances include gas, oil, wood or coal-fired boilers and heaters, continuous flow or other water heaters, gas hobs, cookers or ovens which draw air in from the room and duct exhaust gases out through a chimney or extraction ducting.
When used in extraction mode, the appliance draws air in from the room in which it is installed **and** from neighbouring rooms.
If there is insufficient air, an underpressure will occur. The heating appliance may be starved of oxygen, impairing combustion.

Harmful gases could be drawn out of the chimney or extraction ducting back into the room, with potentially fatal consequences.

In order to ensure safe operation, and to prevent gases given off by the heating appliances from being drawn back into the room when the cooker hood and the heater are in operation simultaneously, an underpressure of 0.04 mbar (4 pa) is the maximum permissible in the room.

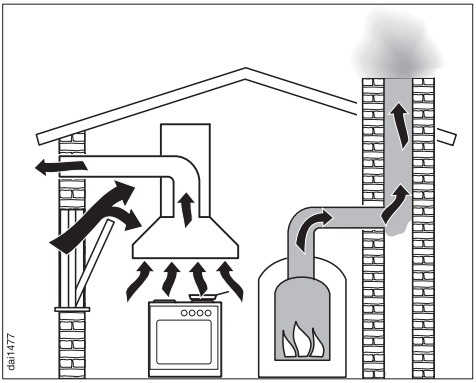

Ventilation can be maintained by air inlets which must not be blocked, in windows, doors and outside wall vents, or by other technical measures, such as ensuring that the cooker hood can only be switched on when the heating appliance is switched off or vice versa. A ventilation brick alone is not generally sufficient to ensure safe ventilation.

⚠ The overall ventilation condition of the dwelling must be taken into account. If in doubt, the advice of a competent builder or, for gas, a qualified gas fitter (Corgi registered in the UK) must be sought.

One of the following technical measures may be necessary to ensure safe operation.

– If the only way of ensuring adequate ventilation is via an open window, a window contact switch should be fitted to ensure that the cooker hood can only operate when the window is opened sufficiently. A window contact switch kit is available from good builders' merchants.
  Take care when ventilating the room through an open window that ventilation is not impaired by a closed blind or curtain.

– The cooker hood can be set up to automatically switch on an air intake fan or open a motorised inlet flap when it is switched on.

– The cooker hood can be set up to automatically switch off a heating appliance which also depends on the air from the room when it is switched on.

The Miele DSM 400 control module offers the possibility of combining other components with the cooker hood (see "Operation with Control module DSM 400").
It is available to purchase as an optional extra.

If in any doubt , the advice of a qualified builder, gas fitter (Corgi registered in the UK) or electrician must be sought.

Correct use

▶ Never use an open flame beneath the cooker hood. To avoid the danger of fire, do not flambé or grill over an open flame under the cooker hood. When switched on, the cooker hood could draw flames into the filter. Fat particles drawn into the cooker hood present a fire hazard.

▶ When using the cooker hood over a gas hob, ensure that any burners in use are always covered by a pan. Switch the cooking zone off when a pan is removed, even for a short time. Regulate the flame so that it does not burn up the sides of the pan.
Do not allow the pans to overheat excessively (e.g. when using a wok). The cooker hood can become damaged when exposed to excessive heat.

▶ Always switch the cooker hood on when a cooking zone is in use, otherwise condensation may collect in the hood, which could cause corrosion.

▶ When cooking with oil or fat, chip pans and deep fat fryers etc, do not leave the pans unattended. Never leave an open grill unattended when grilling. Overheated oil and fat can ignite and could set the cooker hood on fire.

▶ Do not use the cooker hood without the filters in place. This way you will avoid the risk of grease and dirt getting into the appliance and hindering its smooth operation.

▶ The filters should be regularly cleaned or changed as appropriate. Saturated filters are a fire hazard. See "Cleaning and care".

▶ Do not use a steam-cleaner to clean this appliance. Pressurised steam could reach the electrical components and cause a short circuit.

Correct installation

▶ Refer to the cooker or hob manufacturer's instructions as to whether a cooker hood may be operated above the cooker/hob.

▶ The minimum safety distances between the top of the cooker or hob and the bottom of the cooker hood given in the "Appliance dimensions" section of this booklet must be maintained, unless the hob manufacturer states that a greater safety distance is required.

If more than one appliance is fitted beneath the cooker hood, and they have different minimum safety distances to the cooker hood, select the greater distance.

▶ Safety regulations prohibit the fitting of a cooker hood over solid fuel stoves.

▶ All ducting, pipework and fittings must be of non-flammable material. These can be obtained from the Miele Spare Parts department or from builders' merchants.

▶ The appliance must not be connected to a chimney or vent flue which is in use. Neither should it be connected to ducting which ventilates rooms with fireplaces.

▶ If exhaust air is to be extracted into a chimney or ventilation duct no longer used for other purposes, seek professional advice.

Accessories

▶ Only use genuine Miele spare parts and accessories with this appliance. If spare parts or accessories from other manufacturers are used, this will invalidate the guarantee, and Miele cannot accept liability.

The manufacturer cannot be held liable for damage caused by non-compliance with these Warning and Safety instructions.

Guide to the appliance

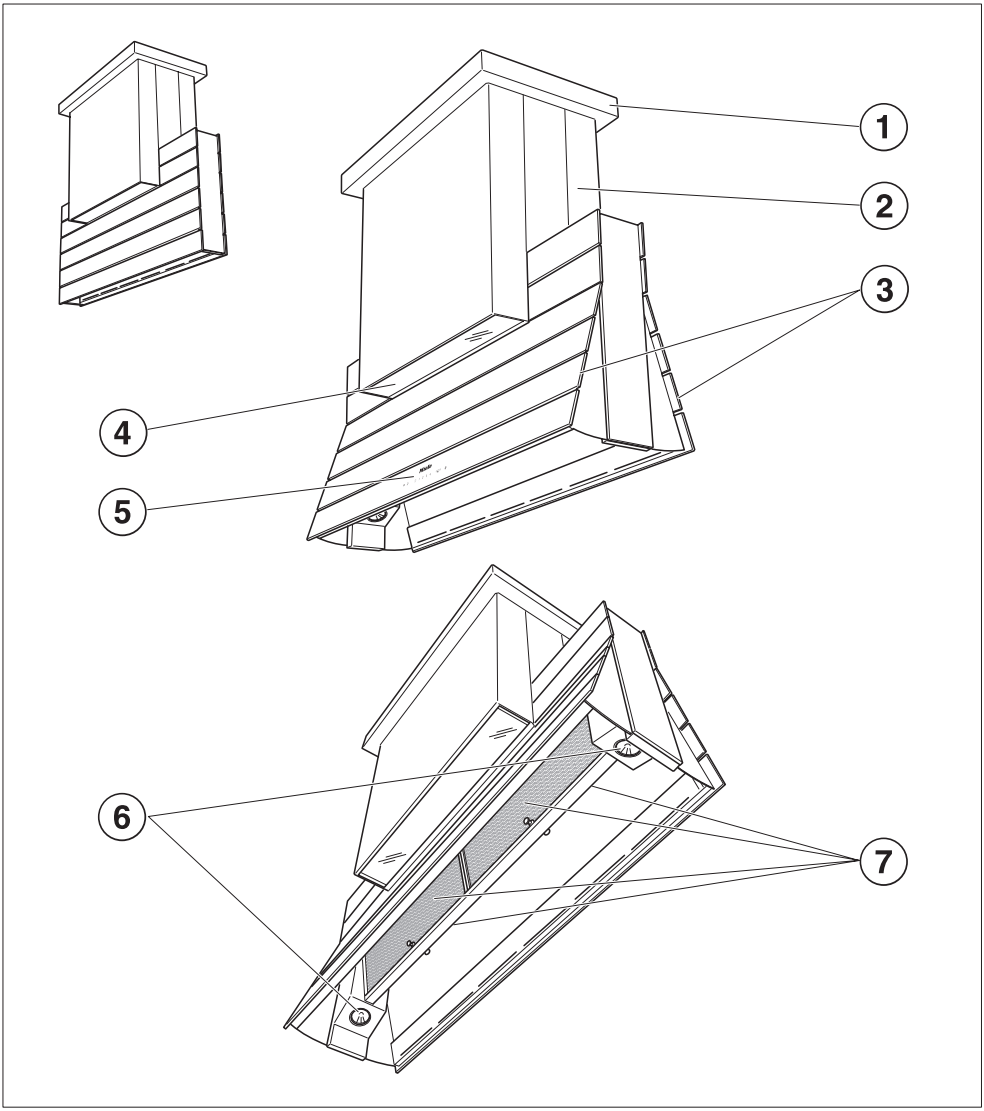

dai2203

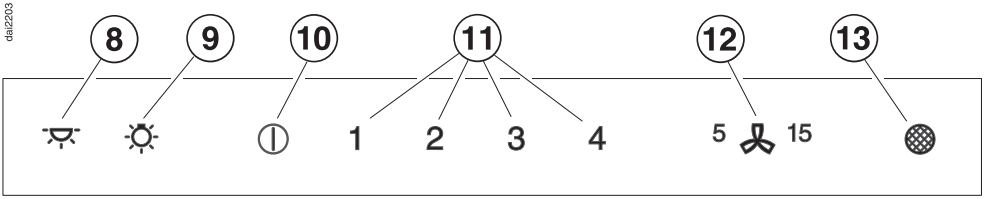

① **Cover plate**

② **Tower**

③ **Canopy**

The canopy opens as soon as the fan is switched on.

④ **Feature lighting**

⑤ **Controls**

The symbols act as touch controls. To select a function, touch the relevant symbol. An audible tone sounds briefly to confirm selection.

⑥ **Hob lighting**

⑦ **Grease filters**

⑧ **Touch control for the feature lighting**

⑨ **Touch control for hob lighting**

This control switches the lighting on and off, and is also a dimmer switch.

⑩ **Touch control for switching the fan on and off**

⑪ **Touch controls to select the fan power level**

⑫ **Touch control for the run-on option** The fan can be set to switch off automatically after either 5 or 15 minutes.

⑬ **Touch control for the grease filters**

The touch control lights up when the grease filters need to be cleaned.

The touch control is used to reset the operating hours counter every time the grease filters are cleaned (see "Cleaning and care").

It can also be used to check and alter the operating hours counter.

For information about using the appliance, see "Operation".

Mode of operation

The cooker hood works with

. . . air extraction:

The air is drawn in and cleaned by the grease filters and directed outside.

The cooker hood is fitted with a **non-return flap** which is closed when the cooker hood is switched off. No exchange of room and outside air can take place.

When the cooker hood is switched on, the non-return flap opens for the cooking vapours to be blown directly outside.

To switch the fan on ⏻

■ Touch the ⏻ sensor.

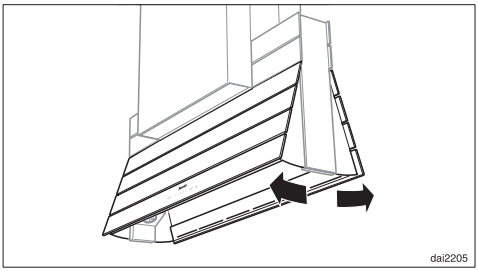

The fan runs at power level 2.
The ⏻ and "2" sensors light up. The canopy will open.

If the cooker hood has been connected to a window contact switch via the Miele DSM 400 control module, then the fan cannot be switched on if the window is shut. The ⏻ sensor will flash.

To select a power level

Depending on the intensity of the cooking vapours, levels 1 to 3 are usually sufficient for normal cooking.

■ Select the level you require by touching the "1", "2" or "3" sensors.

Intensive setting

■ For short periods of cooking food with intensive vapours and a strong aroma, e.g. when searing meat, you may wish to select level 4, the Intensive Setting.

Automatic switch-off of the Intensive setting

You can set the Intensive setting so that it always only runs for 10 minutes before reverting automatically to level 3.

■ To set this option, both the fan and the hob lighting must be switched off.

■ Touch the "5 15" sensor for approx. 10 seconds until the "1" sensor lights up.

■ Touch in turn

– the ☼ sensor,

– the "1" sensor and

– the ☼ sensor again.

The sensors for fan power levels 1 and 4 will flash if the automatic switch-off for the Intensive setting is not activated.

■ Touch the "4" sensor to activate automatic switch-off.
The "1" and "4" sensors will now light up constantly.
Touch the "1" sensor to deactivate the automatic switch-off function.

■ Touch the "5 15" sensor to confirm your selection.

If you do not confirm your selection within 4 minutes, the cooker hood will automatically revert to the original setting.

Run-on option "5 15"

It is advisable to leave the fan running for a few minutes after cooking has finished to neutralise any lingering odours in the air.

The fan can be set to switch off automatically after either 5 or 15 minutes.

- After cooking has finished, press the run-on option control "5 15" whilst the fan is still running.

– Press once = The fan will switch off after 5 minutes (the "5" lights up).

– Press twice = The fan will switch off after 15 minutes (the "15" lights up).

To switch off the run-on option, touch the run-on option sensor again. The appliance will then not switch off automatically.

To switch the fan off ⏻

- Touch the ⏻ sensor to switch the fan off.

The canopy will close.

- If the canopy needs to be kept open after it has been switched off (e.g. for cleaning), touch the current fan level sensor for approx. 5 seconds whilst the fan is running, until the fan switches off. The canopy will remain open.
  To switch the fan on again, touch any of the fan level sensors.

Hob lighting ☼

The hob lighting can be switched on and off independently of the fan.

To switch the hob lighting on

- Touch the ☼ sensor briefly.

The lighting will switch on at maximum brightness.

To dim the hob lighting

The brightness of the lighting can be adjusted.

- With the lighting switched on, touch and hold the ☼ sensor.
  The brightness will gradually dim until you release the sensor.
- To increase the brightness, touch the sensor again to the level required, then release it.

If you keep your finger on the sensor, the light will continually change between bright and dim.

To switch the hob lighting off

- Touch the ☼ sensor briefly.

Feature lighting

The feature lighting can be switched on and off by touching the sensor.

Safety cut-out

Should the cooker hood be left on, the fan will switch off automatically after 10 hours. The lighting will remain on.

- Touching the ⏻ sensor will switch the fan back on again.

Operating hours counter

The number of hours the appliance has been in operation is stored in memory.

The operating hours counter tells you when the grease filters need to be cleaned.

After 30 hours of operation (or another time if the operating hours counter has been altered), the sensor will light up. The grease filters must then be cleaned.

Afterwards, the operating hours counter will need to be reset (see "Cleaning and care").

Reading the grease filter operating hours counter

To check the percentage of time set already used:

- Touch the ⏻ sensor to switch the fan on.
- Touch and hold the sensor.

One or more of the "1" to "4" sensors will flash.

The number of flashing sensors indicates the percentage of the operating time which has already been used up.

Sensor "1"	=	25 %
Sensors "1" and "2"	=	50 %
Sensors "1" to "3"	=	75 %
Sensors "1" to "4"	=	100 %

The number of operating hours used remains in the memory, even when the appliance is switched off or there is a power cut.

Altering the grease filter operating hours counter

You can set the operating hours counter to suit the type of cooking you do.

The operating hours counter is set at the factory for 30 hours.

Select a shorter time of 20 hours if you fry a lot.

If you only cook occasionally, we still recommend 20 hours, because grease which has built up gradually over a long period of time will harden on the grease filters and make cleaning more difficult.

If you use very little fat for cooking, select a longer time.

To alter the operating time:

- Touch the ⏻ sensor to switch the fan off.
- Touch the "5 15" and ▨ sensors at the same time.

The ▨ and one of the "1" to "4" sensors will flash.

The "1" to "4" sensors indicate the time which has been set:
Sensor "1" = 20 hours
Sensor "2" = 30 hours
Sensor "3" = 40 hours
Sensor "4" = 50 hours

- Touch the "1" sensor to select a shorter time and the "4" sensor to select a longer time, until the time required has been set.
- Confirm your selection by touching the ▨ sensor.

All the lamps will go out.

If you do not confirm your selection within 4 minutes, the cooker hood will automatically revert to the original setting.

Sensor control audible tones

When selecting a function with the sensors, an audible tone will sound briefly to confirm.

The audible tone can be deactivated.

- Touch the ⏻ sensor to switch the fan off.
- Touch the "4" and ▨ sensors at the same time for approx. 5 seconds until an audible tone sounds briefly. The audible tone is now switched off for all functions.
- To reactivate the audible tone, repeat the above process.

After the cooker hood has been disconnected from the mains electricity supply or after a power cut, the audible tone is activated regardless of the last setting.

Housing

General notes

The surfaces are susceptible to scratches and abrasions. Please observe the following cleaning instructions.

- All external surfaces and controls can be cleaned using an E-cloth (available from the Miele Spare Parts Department or via the Internet on www.miele-shop.com depending on country), or with warm water and a little washing-up liquid applied with a well wrung-out soft sponge or cloth.

Only use a damp cloth as water could get into the appliance and cause damage.

- Wipe the surfaces dry using a soft cloth.

Do not use:

– cleaning agents containing soda, acids, chlorides or solvents,

– abrasive cleaning agents, e.g. powder cleaners or cream cleaners, and abrasive sponges, e.g. pot scourers or sponges which have been previously used with abrasive cleaning agents. These will damage the surface material.

Important for appliances with stainless steel surfaces

- Stainless steel surfaces can be cleaned using the Miele E-Cloth or with a suitable, non-abrasive, proprietary cleaning agent, following the manufacturer's instructions on the packaging.
- To help prevent re-soiling, a proprietary conditioning agent for stainless steel (available from the Miele Spare Parts Department or via the internet on www.miele-shop.com) can also be used.

Important for appliances with glass surfaces

- Glass surfaces can be cleaned using a proprietary non-abrasive cleaning agent designed specifically for use on glass.

Do not use:

– sharp metal tools,

– oven sprays.

Grease filters

The re-usable metal grease filters in the appliance remove solid particles (grease, dust, etc.) from the kitchen vapours, preventing soiling of the cooker hood.

The grease filters should be cleaned regularly (at least every 3-4 weeks) to avoid a build-up of fat, but always clean immediately if the ⊛ sensor lights up.

An oversaturated filter is a fire hazard.

To remove the grease filters, the canopy needs to be open.

- Touch the ⏻ sensor to switch the fan on.

The fan will start running at power level 2, and the canopy will open.

- Touch the "2" sensor for approx. 5 seconds, until the fan switches off. The canopy will remain open.

To avoid damaging the filters or the hob below, make sure you hold the filters securely at all times when handling them.

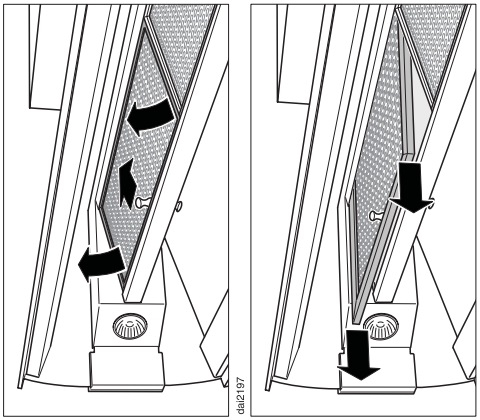

- Holding the grease filter by the handle, push upwards out of the lower groove, hinge it forwards and lift it down and out.

Cleaning the grease filters by hand

- Clean the filters with a soft nylon brush in a mild solution of hot water and a little washing-up liquid.
  Do not use "neat" washing up liquid.

Do not use:

– cleaning agents containing descaling agents,

– powder cleaners, cream cleaners or abrasive all-purpose cleaning agents,

– oven sprays.

Cleaning the grease filters in the dishwasher

- Place the filters as upright as possible in the lower basket, with the short sides upright, and wash on a 65°C programme, ensuring the spray arm is not obstructed. If a Miele dishwasher is being used, select the Sensor wash programme.
- Use a mild dishwasher detergent.

Depending on the cleaning agent used, cleaning the filters in a dishwasher can cause permanent discolouration to the surface. However, this will not affect the functioning of the filters in any way.

- After cleaning, leave the filters to dry on an absorbent surface before replacing them.
- When removing the filters for cleaning, also clean off any residues of oil or fat from the now accessible housing to prevent the risk of these catching fire.

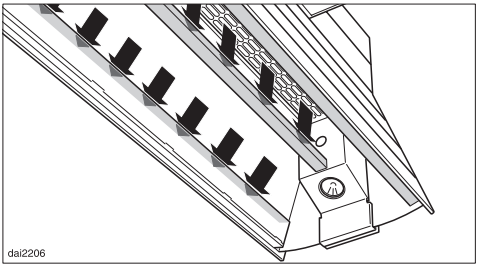

- When the cooker hood is operating, grease residues are deposited in the grooves on either side of the canopy. Clean these grooves and the grease filter holders every time the grease filters are removed.
- Replace the grease filters.
- Then touch any of the "1" to "4" sensors. The fan will then switch back on.

Resetting the grease filter operating hours counter

After cleaning, the operating hours counter needs to be reset.

- Touch the ⏻ sensor to switch the fan on.
- Touch the ▦ sensor for approx. 3 seconds until only the "1" sensor is flashing.
  The ▦ sensor light will go out.

If the grease filters are cleaned **before** the operating hours counter has reached its maximum,

- touch the ▦ sensor for approx. 6 seconds until only the "1" sensor is flashing.

Changing a halogen lamp

To change the lamps, the canopy needs to be open.

■ Touch the ⏻ sensor.

The fan will start running at power level 2, and the canopy will open.

■ Touch the "2" sensor for approx. 5 seconds, until the fan switches off. The canopy will remain open.

■ Before any cleaning or maintenance work, disconnect the cooker hood from the mains supply. Ensure that:

– it is switched off at the isolator, or

– the screw-out fuse is removed (in countries where this is applicable), or

– the fuse from the fused spur connection unit is withdrawn, or

– it is switched off at the mains fuse box.

■ Remove the grease filters.

⚠ Exercise caution when changing halogen lamps. They get very hot during use, and remain hot for some time after being switched off: danger of burning.
Wait until the lamps have cooled down before changing them.

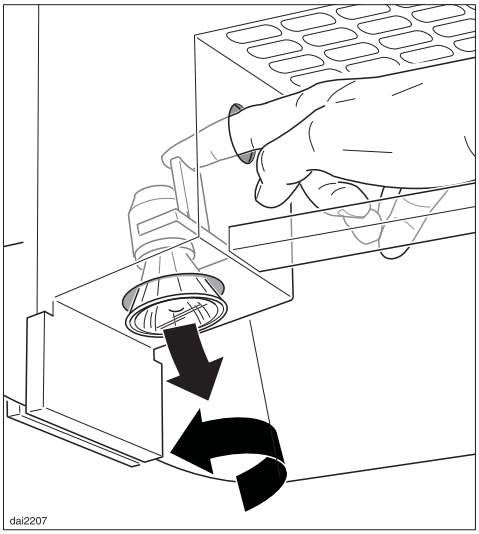

■ Press the lighting unit down slightly through the hole above the lamp, as shown.

■ Turn the halogen lamp anti-clockwise out of its socket.

■ Replace it with a new halogen lamp (specification: GU/GZ 10, 230 V, 50 W). Screw the lamp into the socket and push it upwards.

We recommend only using lamps of the same specification and also made by the same manufacturer as the ones being replaced.

■ Replace the grease filters.

■ Reconnect the cooker hood to the mains supply.
The canopy will close.

Changing a fluorescent tube

■ Before any cleaning or maintenance work, disconnect the cooker hood from the mains supply. Ensure that:

– it is switched off at the isolator, or

– the screw-out fuse is removed (in countries where this is applicable), or

– the fuse from the fused spur connection unit is withdrawn, or

– it is switched off at the mains fuse box.

To avoid damaging the glass cover or the hob below, make sure you hold the glass cover securely at all times when handling it.

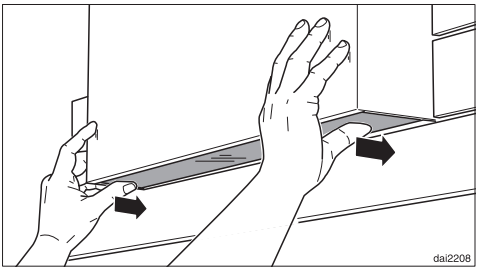

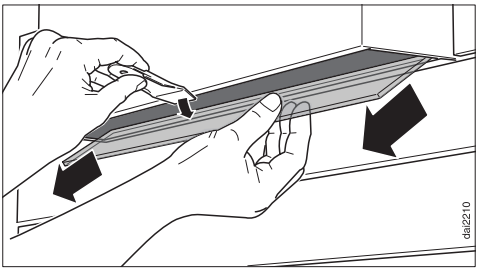

■ Push the glass cover back slightly, then angle it down at the front to remove. Use a lever to help you if required.

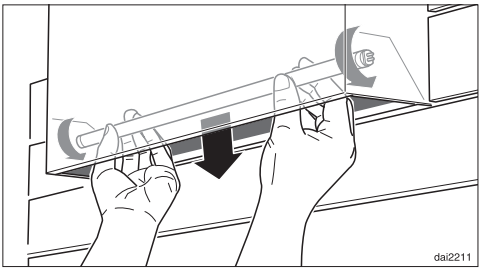

■ Twist the fluorescent tube approx. 180° and remove it.

■ Replace it with a new fluorescent tube of the same specification (14 W, colour 830).

■ To fit it, follow the instructions for removal in reverse.

Appliance dimensions

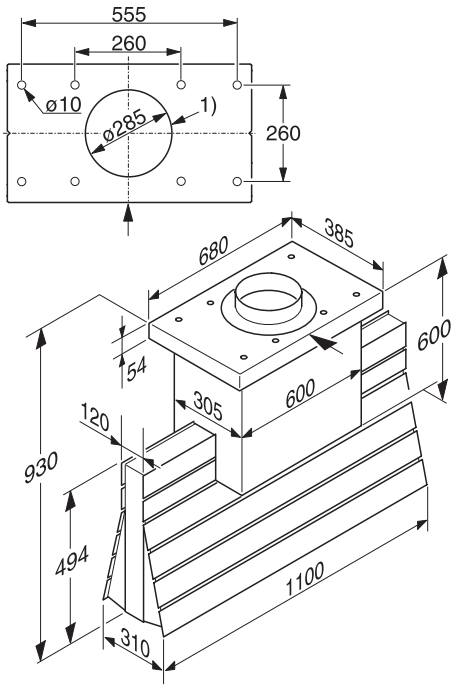

1) Cut-out for feeding through the exhaust ducting and the mains cable

Floating bracket ∅ 200 mm

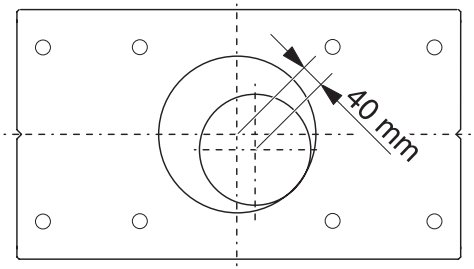

The floating bracket means that the hood can also be installed where the exhaust cut-out in the ceiling is not centrally positioned over the hob. There is a max. margin of 40 mm in any direction.

Safety distance between hob and cooker hood

The **minimum** safety distances between the top of a cooker or hob and the bottom of the cooker hood are as follows, unless a greater distance is specified by the manufacturer of your cooking appliance:

550 mm	above electric hobs and cookers,
650 mm	above an open grill or deep fat fryer,
650 mm	above gas hobs and cookers.

If this cooker hood is installed above a Miele Wok CS 1028 CombiSet appliance, a minimum safety distance of 760 mm must be maintained between the burner and the lower edge of the cooker hood.

See "Warning and Safety" instructions for further information.

Before installation, it is important to read the information given on the following pages as well as the "Appliance dimensions" and the "Warning and Safety instructions" at the beginning of this booklet.
This is particularly crucial when using the cooker hood at the same time as a heating appliance that relies on oxygen from the same room to avoid the danger of toxic fumes building up.

Installation instructions

See enclosed Installation sheet for instructions on how to install this appliance.

Assembly parts



8 screws 8 x 60 mm with
8 washers and
8 S 10 plugs to secure the cover plates to the ceiling

The screws and plugs are for use in concrete ceilings only.
For other types of construction, alternative suitable fixings will be required.
Make sure the ceiling is strong enough to bear the weight of the cooker hood.

2 screws M4 x 8 mm for securing the tower.

8 spacers to use in the event of an uneven ceiling.

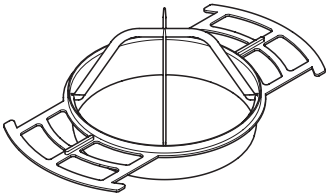

1 floating bracket

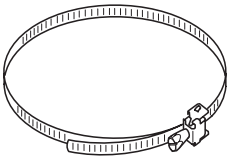

1 hose clip for securing the exhaust ducting to the floating bracket.

Connection for air extraction

Important: To avoid the danger of toxic fumes, please observe the Warning and Safety instructions. This is especially crucial when using the cooker hood at the same time as another heating appliance which relies on air from the same room. The cooker hood should be installed according to local and national building regulations. Seek approval from the building inspector where necessary.

– All ducting, pipework and fittings must be of non-flammable materials.

– The exhaust ducting should be as short and straight as possible.

– To ensure efficient air extraction, the diameter of the exhaust ducting should not be less than 200 mm.

If exhaust ducting with a diameter of less than 200 mm, or if flat ducting is used, the noise level of the cooker hood will increase and extraction will be less efficient.

Only reduce the diameter of the ducting if absolutely necessary, e.g. where narrower ducting has already been installed.

– Only use wide radius bends. Tight bends reduce the air throughput of the cooker hood.

– Only use smooth pipes or flexible hoses made from non-flammable materials for extraction connection.

– When ducting is horizontal it must be laid to slope away at at least 1 cm per metre to ensure no condensate drains into the appliance.

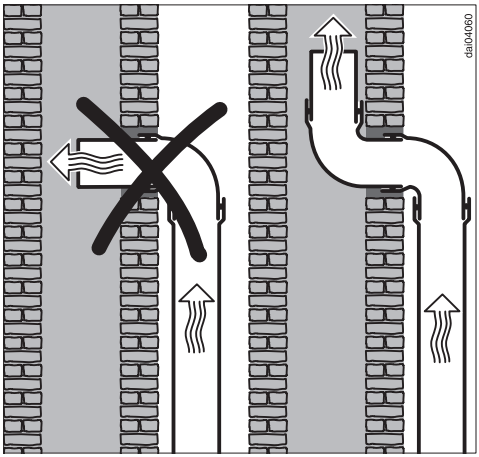

– If the exhaust air is to be ducted into a vent flue, the ducting must be directed in the flow direction of the flue.

Important

If the exhaust ducting is to run through rooms, ceiling space etc. where there may be great variations in temperature between the different areas, the problem of condensation will need to be addressed. The exhaust ducting will need to be suitably insulated.

For exhaust ducting with a diameter of 200 mm, the following accessories are required:

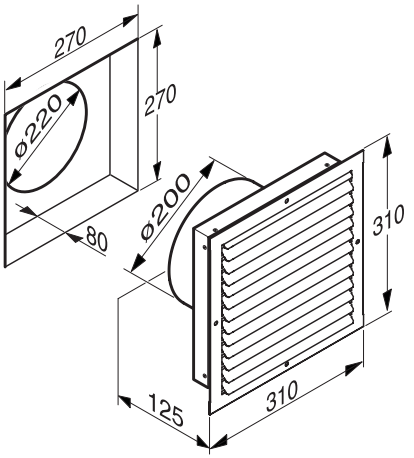

– Exhaust grille DFG 200, for mounting on the external wall.

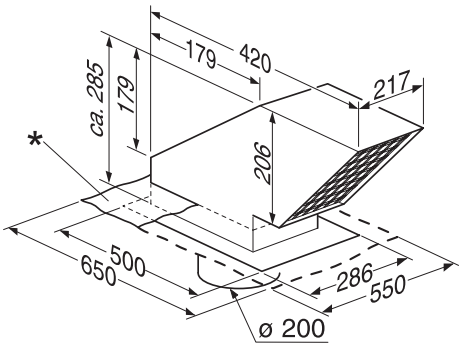

*Flashing

– Roof ducting DDF 200, for mounting on a sloping tiled roof.
– Exhaust hose DAS 200
– Reducing collar for the exhaust stub if using exhaust ducting with a 150 mm diameter.

Electrical connection

⚠ All electrical work should be undertaken by a suitably qualified and competent person in strict accordance with current national and local safety regulations (BS 7671 in the UK).

Installation, repairs and other work by unqualified persons could be dangerous, for which the manufacturer cannot be held liable.

Ensure power is not supplied to the appliance until after installation or repair work has been carried out.

Do not connect the appliance to the mains electricity supply by an extension lead. These do not guarantee the required safety of the appliance.

The connection data is given on the data plate. (See "After Sales Service"). Ensure that this data matches the household mains supply.

Connection of this appliance should be made via a suitable isolator or a double pole fused spur connection unit which complies with national and local safety regulations and the On-Off switch should be easily accessible after the appliance has been built in.
When switched off there must be an all-pole contact gap of 3 mm in the switch (including switch, fuses and relays according to EN 60335).

If the switch is not accessible after installation (depending on country), an additional means of disconnection must be provided for all poles.

For extra safety it is advisable to install a residual current device (RCD) with a trip current of 30 mA.

Important

This appliance is supplied for connection to an a.c.
230 V single phase 50 Hz supply.

The wires in the mains lead are coloured in accordance with the following code:

Green/yellow	= earth
Blue	= neutral
Brown	= live

WARNING:
THIS APPLIANCE MUST BE EARTHED

The Miele DSM 400 control module can be used to combine the cooker hood with other components.

It enables the following:

Connection to a window contact switch

If adequate ventilation to the room can only be ensured by having a window open when the cooker hood is in use at the same time as a heating appliance which depends on the air from the same room, then the control module can be used to connect a window contact switch (not supplied) to the appliance.

Once connnected, the cooker hood can only be operated when the window is sufficiently open (see also "Warning and Safety instructions").

When the window is closed, the cooker hood fan cannot be switched on. The ⓘ sensor on the cooker hood will flash.

The cooker hood lighting is not affected by this.

Take care when ventilating the room through an open window that ventilation is not impaired by a closed blind or curtain.

If the control module is disconnected in order to operate the cooker hood without the window contact switch (e.g. after moving house) the cooker hood electronics must be reset by a Miele service technician.

Potential free connection

This enables a further appliance to be controlled by the switch setting on the cooker hood fan.

– For instance it can be used to ensure a sufficient supply of fresh air when the cooker hood and a heating appliance which also depends on the air in the room are being used together, by switching on an air intake fan, or opening a motorised inlet flap as soon as the cooker hood fan is switched on.
  It is important to ensure that the fan power is sufficient and that the air intake has a suitable cross-sectional diameter.

– If a sufficient air intake cannot be guaranteed, then the potential free contact will enable a heating appliance, which depends on air in the same room as a cooker hood, to be switched off when the cooker hood is in operation.

See also "Warning and Safety" instructions.

Connection to a light switch

The control module can be used to switch on the hob lighting on the cooker hood and also to dim it, depending on model, via a light switch in the house.

The feature lighting cannot be operated via the control module.

Installation

The control module is fitted in the tower after the cover plate has been unscrewed from the ceiling.

The control module is supplied with its own detailed operating and installation instructions.

In the event of a fault which you cannot correct yourself, or if the appliance is under guarantee, please contact:

– Your Miele Dealer

or

– The Miele Customer Contact Centre (see back cover for address).

When contacting your Dealer or the Contact Centre, please quote the model and serial number of your appliance.

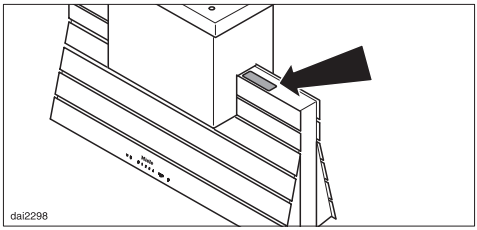

These are shown on the data plate located at the top of the canopy.

Please note that telephone calls may be monitored and recorded for training purposes.

Technical data

Total connected load. . . . . 632 W
– Fan motor . . . . . 500 W
– Canopy mechanism . . . . . 4 W
– Hob lighting . . . . . 2 x 50 W
– Feature lighting . . . . . 2 x14 W

Voltage . . . . . 230 V

Frequency . . . . . 50 Hz

Fuse rating (UK). . . . . 13 A

Weight. . . . . 60 kg

Fan performance according to EN 61591

Extraction power with extraction system ∅ 200 mm:

Level I . . . . . 350 m^3/h
Level II. . . . . 600 m^3/h
Level III . . . . . 850 m^3/h
Level IV Intensive Setting . . . 1,300 m^3/h

Unrestricted . . . . . 1,450 m^3/h

United Kingdom
Miele Co. Ltd.
Fairacres, Marcham Road
Abingdon, Oxon, OX14 1TW
Tel: 0845 365 0555
Fax: 0845 365 0777
Customer Contact Centre Tel: 0845 365 6600
E-mail: info@miele.co.uk
Internet: www.miele.co.uk

Australia
Miele Australia Pty. Ltd.
ABN 96 005 635 398
1 Gilbert Park Drive, Knoxfield, VIC 3180
Tel: (03) 9764 7130, Fax: (03) 9764 7149
Internet: www.miele.com.au

China
Miele Shanghai
Suite 4105-06, Plaza 66
1266 Nanjing Road West
Jing An District
Shanghai 200040, PRC
Tel: +86 21 6288 4200, Fax: +86 21 6288 4100
E-mail: mieleshanghai@cn.miele.com
Internet: www.miele.cn

Hong Kong
Miele (Hong Kong) Limited
AIA Plaza, 24th Floor
18 Hysan Avenue
Causeway Bay
Tel: +852- 2610-1331, Fax: +852-2610-1013
E-mail: mielehk@miele.com.hk
Internet: www.miele.hk

India
Miele Appliances India Pvt. Ltd.
Ground Floor, Copia Corporate Suites
Plot No. 9, Jasola
New Delhi – 110025
Tel: 011-46 900 000, Fax: 011-46 900 001
E-mail: customercare@miele.in
Internet: www.miele.in

Ireland
Miele Ireland Ltd.
Broomhill Road, Tallaght, Dublin 24
Tel: (01) 461 0710, Fax: (01) 461 07 97
E-Mail: info@miele.ie
Internet: www.miele.ie

New Zealand
Miele New Zealand Limited
Unit L, 10-20 Sylvia Park Road
Mt. Wellington, 1060, Auckland, NZ
Tel: 0800 264 353, Fax: 0800 463 453
Internet: www.miele.co.nz

Singapore
Miele Southeast Asia
Miele Pte. Ltd.
163 Penang Road
04 - 02/03 Winsland House II
Singapore 238463
Tel: +65 6735 1191, Fax: +65 6735 1161
E-Mail: infosea@miele.com.sg
Internet: www.miele.sg

South Africa
Miele (Pty) Ltd
63 Peter Place, Bryanston 2194
P.O. Box 69434, Bryanston 2021
Tel: +27 (0) 11 548-1900
Fax: +27 (0) 11 548-1935
E-mail: info@miele.co.za
Internet: www.miele.co.za

United Arab Emirates
Miele Appliances Ltd.
P.O. Box 11 47 82
Gold & Diamond Park
Sheikh Zayed Road
Building 6 / Offices Nos. 6-214 to 6-220
Dubai
Tel: +971-4-341 84 44
Fax: +971-4-341 88 52
E-Mail: info@miele.ae
Internet: www.miele.ae

Alteration rights reserved / 4209

M.-Nr. 07 087 760 / 06

CE